



# **Getting Your Multifunction Back On Your Network After A Router Or Network Change**

**PIXMA MX922**

**Windows OS**

# Connecting to the Network

**If any of the following situations exist , the printer will need to be setup again**

- You have replaced your Router or Access Point
- You want to use a different wireless network
- Router settings have been changed.

## **IMPORTANT**

- Log on as the administrator (or a member of the Administrators group).
- Quit all running applications before installation.
- Do not switch users during the installation process.
- Internet connection may be required during the installation. Connection fees may apply. Consult the internet service provider.
- It may be necessary to restart your computer during the installation process. Follow the on-screen instructions and do not remove the Setup CD-ROM during restarting. The installation resumes once your computer has restarted.
- If the firewall function of your security software is turned on, a warning message may appear that Canon software is attempting to access the network. If such a warning message appears, set the security software to always allow access.

Continue to the next page for setup instructions.

# Installing the Drivers & Software

[<< Previous](#)

 
[Next >>](#)

## Installing the PIXMA MX922 on Your Wireless Network

The re-setup procedure when you have changed networks, access point or router is the same as a first-time setup

**Insert the Setup CD-ROM \*** that came with your printer into your CD-ROM drive and proceed through the easy to follow instructions.

If the following screen appears, select **Start Setup Again**.

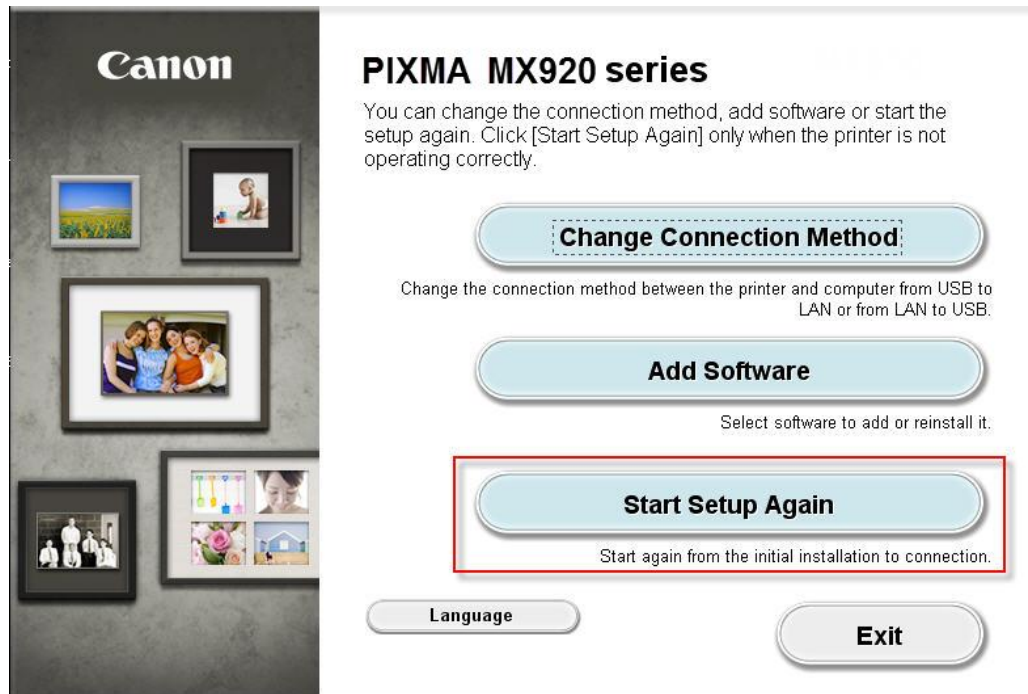

# Connecting to the Wireless Network

[<< Previous](#)

[Next >>](#)

When the **Connection Method Selection** screens (Steps 1-1 and 1-2) appear, select **Network Connection** and then **Wireless Connection**

## 1-1 Connection Method Selection

Select a method to connect the printer.



Network Connection

Select this when using the printer with your computer without using a **USB** cable, or when sharing the printer with other computers. **Access point** or **router** is

## 1-2 Connection Method Selection

Select a method to connect to the **network**.

 


Wireless Connection

Select this when connecting the printer to the network via Wi-Fi (without using a cable).

Continue to follow instructions until the **Printer Setup** screen (Step 2-1) appears. This is shown on the next page

Click **Connect to the network** on the **Printer Setup** screen (2-1).

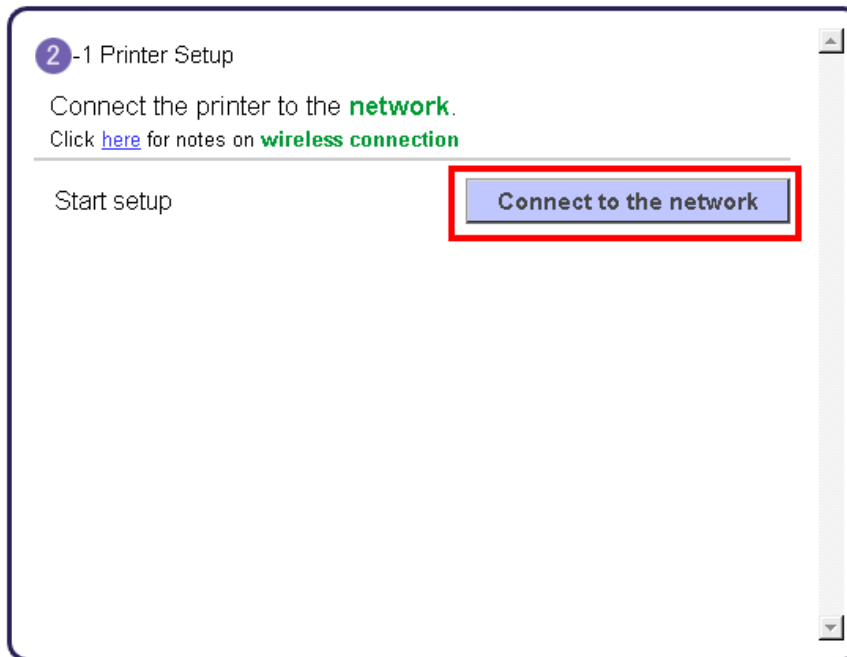

Continue to follow instructions until the **Setup Procedure Selection** screen (Step 3-1) appears. This is shown on the next page

The printer automatically searches for access points that support **WPS** (Wi-Fi Protected Setup)\*.

\*Unless you are absolutely sure your access point supports WPS and you are familiar with activating this on your access point, **press the Stop button** on the printer's operation panel and click on **Other Methods** on the **Setup Procedure Selection** screen (screenshot shown below)\*.

 
If the **Push Button Method** is not shown on the printer's operation panel (when no WPS access points have been detected), select **Standard setup** on the printer's operation panel, then click **Other Methods** on the **Setup Procedure Selection** screen

3 -1 Setup Procedure Selection


The printer will automatically search for **access points** supporting **WPS**.

Click the method below that matches the screen displayed on your printer.

\* If the Push Button Method screen is displayed on the printer  
When you are unsure if your access point or **router** supports this technology, press the **Stop** button.  
When the printer screen changes from left to right, click [here](#)  
Proceed to the screen for Standard setup.

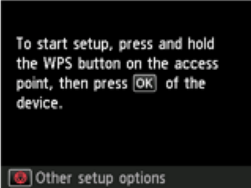

[Push Button Method](#)

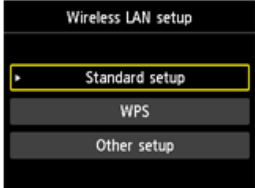 


[Other Methods](#)

If you selected the **Push Button Method**, follow any remaining instructions to complete setup. [Click here to skip ahead](#)

If you selected **Other Methods**, please continue to the next page for important information

For Standard setup only

 Select **Standard setup** on the **Setup Procedure Selection** screen (3-2)

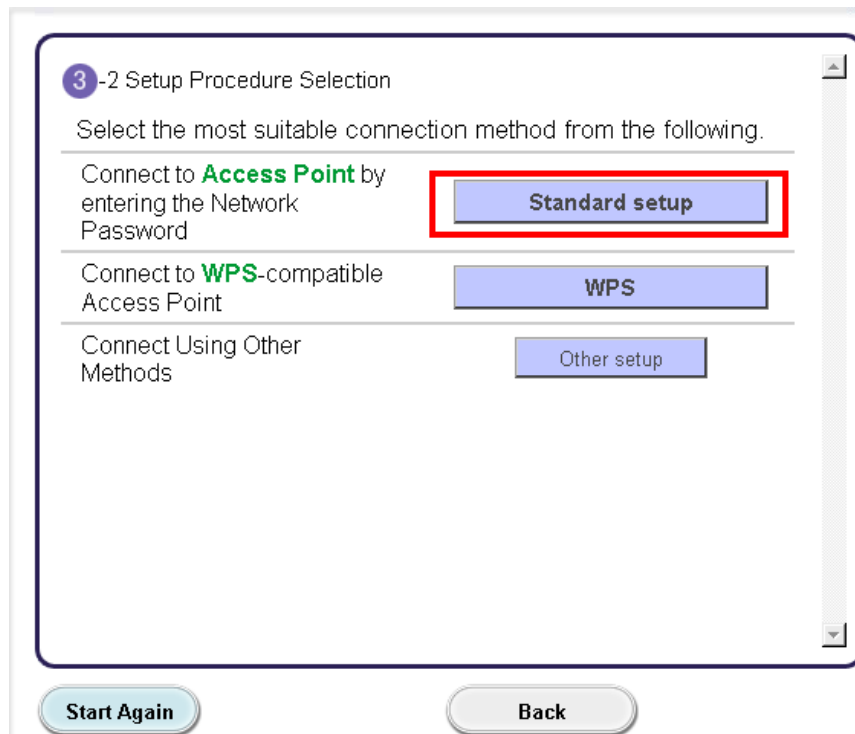


Continue to next page before proceeding any further with setup

Follow On-screen instructions. When you get to Step 4-2 and later in Step 4-4 ( screens shown below) you will need to know SSID and password information\*

## Step 4-2

 4 -2 Connection via Standard setup

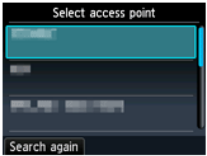


1. Select your **access point**, then press the **OK** button.  
If another screen appears, refer to "Troubleshooting" on the right.

If you don't know your access point name ▶▶▶ **Confirm the access point name (automatic display)**

Select the automatically displayed access point name in the printer screen.

## Step 4-4

4 -4 Connection via Standard setup



1. Enter the **network password (WEP key or passphrase)**.  
Character entry is case-sensitive so be sure to confirm. Click [here](#) for details on how to enter characters and how to change the character type.

If you don't know the network password for your **access point** ▶▶▶ **Confirm the network password (automatic display)**

Enter the automatically displayed network password in the printer screen.

2. Press the left **Function** button (A).

**\*Unless you are absolutely certain of this information, please continue to the next page for information on locating / verifying this information**



# Connecting to the Wireless Network

[<< Previous](#)

[Next >>](#)

If you don't know your Access Point / Router name or SSID\*, or the Passphrase or Network key for your wireless network, you can find this information during Standard setup using the Setup CD-ROM or the downloaded files (Mini Master Setup or Master Setup).

\*The terms 'SSID' and 'AccessPoint / Router' refer to a name used to identify the specific Access Point or Router. 'Passphrase' and 'Network Key' refer to a password required to prevent unauthorized access to communication.

Look for the **Confirm the access point name (automatic display)** or the **Confirm the network key (automatic display)** buttons during the setup procedure.



Clicking either of these buttons will give the needed information. See example below of the Wireless Lan Setup Information window. (appearance varies depending on Operating System). Use the provided information when selecting the Access Point / Router and for entering the Network Key.

Below is information about the access points detected from your computer.

Wireless LAN Setup Information:

Access Point Na...	Network Key (Encryption Key)
YourNetName	YourPassPhraseorNetKey

OK

Network setup is complete. Continue to follow any remaining On-screen instructions to install the software. On the Software Installation List screen, select any software to be installed. **MP Drivers** is required for the printer to be able to print and scan and cannot be de-selected. **My Image Garden** and **Quick Menu** are highly recommended to take full advantage of your printer's features. If you've already installed these programs on the original installation, it is not necessary to install them again , only **MP Drivers** is required.

## Software Installation List

The selected software will be installed. Make sure that the software you want to click [Next].

<input checked="" type="checkbox"/> MP Drivers	260 MB
<input checked="" type="checkbox"/> User's Manual	10 MB
<input checked="" type="checkbox"/> My Printer	14 MB
<input checked="" type="checkbox"/> My Image Garden	680 MB
<input checked="" type="checkbox"/> Speed Dial Utility	10 MB
<input checked="" type="checkbox"/> Quick Menu	25 MB
<input checked="" type="checkbox"/> Easy-WebPrint EX	25 MB

Follow any remaining On-Screen instructions.